

HUAWEI Module

DTMF Decoder Feature Application Guide

Issue 01 Date 2014-11-25

Copyright © Huawei Technologies Co., Ltd. 2014. All rights reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd. and its affiliates ("Huawei").

The product described in this manual may include copyrighted software of Huawei and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

Trademarks and Permissions

HUAWEI, HUAWEI, and Retrademarks or registered trademarks of Huawei Technologies Co., Ltd. Other trademarks, product, service and company names mentioned may be the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Thus, the descriptions herein may not exactly match the product or its accessories which you purchase.

Huawei reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

DISCLAIMER

ALL CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORSEEABLE OR NOT.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS MANUAL SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Privacy Policy

 
To better understand how we protect your personal information, please see the privacy policy at http://consumer.huawei.com/privacy-policy.



About This Document

Revision History

Document Version	Date	Chapter	Descriptions
01	2014-11-25		Creation



Contents

1 Introduction	.5
1.1 Organization	5
2 DTMF Decoder Feature	.6
2.1 Feature Overview	
2.2 Feature Configruation	. 7
2.2.1 Command Syntax	. 7
2.2.2 Interface Description	. 8
2.2.3 Parameter Description	
2.2.4 Example	
2.3 DTMF Character Report	. 9
2.3.1 Command Syntax	. 9
2.3.2 Interface Description	. 9
2.3.3 Parameter Description	
2.3.4 Example	. 9
3 Appended Description1	10
4 Acronyms and Abbreviations1	11



This document provides references for customers to use Huawei module DTMF (Dual Tone Multiple Frequency) decoder feature. Customers can refer to this document to develop the host application.


Huawei module and the related firmware in the table below support the DTMF decoder feature.

Huawei Module	Firmware Version
MU509-b	12.815.03.01.00 or latter
MU509-b	13.815.07.00.00 or latter
MU509-g	12.815.03.01.00 or latter

Customers can send AT command "ATI" or "AT+GMR" to the module and get the firmware version number.

1.1 Organization

Chapter	Description
Chapter 1 Introduction	Describes the contents and organization of this document.
Chapter 2 DTMF Decoder Feature	DTMF feature overview and the AT command interfaces.
Chapter 3 Appended Description	Appended description of DTMF decoder.
Chapter 4 Acronyms and Abbreviations	Acronyms and Abbreviations

 



This chapter describes the working flow of Huawei module DTMF decoder feature and the AT command interfaces that can be used by host application.

2.1 Feature Overview

Huawei module DTMF decoder feature includes two parts. One is the feature enabled or disabled configuration, and the other is the DTMF decoder and character unsolicited.

- Support AT command to enable or disable the DTMF decoder.
- Support that decode the DTMF signal to the ASCII character ('0'-'9', 'A'-'D', '*' and '#') and report the character to the host application by unsolicited AT command.

Weak network condition may cause failed to decode the DTMF signal.

Users can refer to the working flow of Huawei DTMF decoder feature in Figure 2-1 .



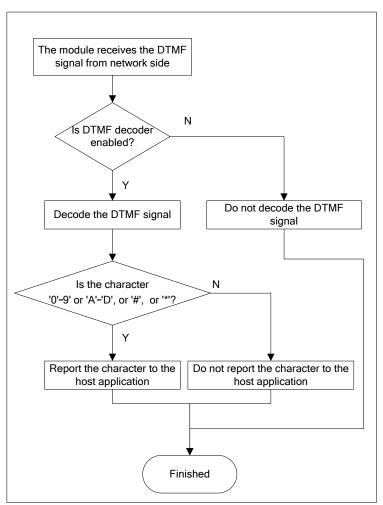


Figure 2-1 DTMF decoder working flow

2.2 Feature Configruation

Users can use the AT command "AT^DDTMFCFG" to configure the DTMF decoder feature.

2.2.1 Command Syntax

Command	Possible response(s)
AT^DDTMFCFG= <para>, <value></value></para>	<cr><lf>OK<cr><lf> In case of an error: <cr><lf>ERROR<cr><lf></lf></cr></lf></cr></lf></cr></lf></cr>
AT^DDTMFCFG?	<cr><lf>^DDTMFCFG: <para>,<value><cr><lf><cr><lf>OK<cr><lf></lf></cr></lf></cr></lf></cr></value></para></lf></cr>

Command	Possible response(s)
^DDTMFCFG=?	<cr><lf>^DDTMFCFG: (list of supported <para>s)<cr><lf><cr><lf>OK<cr><lf></lf></cr></lf></cr></lf></cr></para></lf></cr>

2.2.2 Interface Description

This command sets parameters related to DTMF decoder. <para> specifies the parameter to be set, and <value> specifies the actual value assigned to <para>. This command enables and disables DTMF decoder only in the RX direction, that is, this command controls whether DTMF signals sent from the network side should be decoded and reported with an ASCII code from the collection of '0'-'9', 'A'-'D', '*' and '#' to the TE.

The set command sets parameters related to DTMF decoder.

The read command queries the current values of parameters related to DTMF decoder.

The test command displays all controllable parameters.

2.2.3 Parameter Description

<para>: an integer specifies parameter related to DTMF decoder.

0: Indicates switch of DTMF decoder in the RX direction.

<value>: an integer specifies parameter value of <para>. It is saved upon power-off and restored to default value upon upgrades.

If <para> is set to 0, the available values for <value> are:

0: Disable DTMF decoder in the RX direction (default value).

1: Enable DTMF decoder in the RX direction.

2.2.4 Example

AT^DDTMFCFG=0,1

OK

AT^DDTMFCFG?

^DDTMFCFG: 0,1

OK

AT^DDTMFCFG=? ^DDTMFCFG: (0)

OK

2.3 DTMF Character Report

If the module's DTMF decoder feature is enabled, and the module gets the valid DTMF signal from network side, the module will use the AT command "^DDTMF" to report the character to the host application.

2.3.1 Command Syntax

Command	Possible response(s)	
	<cr><lf>^DDTMF: <key><cr><lf></lf></cr></key></lf></cr>	

2.3.2 Interface Description

When the function to decode DTMF signals in the RX direction is enabled, during communication, the DTMF signals sent from the remote subscriber will be decoded into corresponding characters and reported together with an ASCII code from the collection of '0'-'9', 'A'-'D', '*' and '#', in an unsolicated manner, to the TE through this command.

2.3.3 Parameter Description

<key>: value type: character; value range: '0'-'9', 'A'-'D', '*' and '#'.

2.3.4 Example

^DDTMF: 1



This chapter describes constraints to the DTMF signal delivery side. The DTMF signal delivery side should follow the constraints below. Otherwise, the DTMF signal may be failed to be decoded in local side.

The DTMF signal delivery side should build and deliver the DTMF signal following the 3GPP TS 24.008 and 3GPP TS 23.014 documents requirement.

- The DTMF signal delivery side need build the DTMF signal with playing time not less than 65 ms.
- The DTMF signal delivery side should not send the DTMF signal too fast, and the interval between the two DTMF signals should be not less than 65 ms.

 


Figure 3-1 Constraints for the DTMF signal delivery side



4 Acronyms and Abbreviations

Acronym or Abbreviation	Expansion
ASCII	American Standard Code for Information Interchange
DTMF	Dual Tone Multiple Frequency
RX	Receive
ТЕ	Terminal Equipment